



## Quick Installation Guide

- Ensure that the installation and wiring comply with all applicable codes.
- For indoor use only. Do not place in wet or exposed areas.
- Refer all service to qualified service personnel.

### Installation

- Move the cabinet to its intended location.
- Connect the female end of the AC main line cord (provided in the parts box) to the IEC power connector on the rear of the cabinet. Install the male end into a properly grounded power outlet.
- Zip-tie the power cord to the bridge lance to prevent it from loosening when the cabinet is moved.
- Place the cabinet in its final position, taking care to ensure that ventilation openings are not blocked and the cords and cables are not pinched.
- Adjust the four cabinet leg levelers down, so that the cabinet is level and does not move or rock. The cabinet wheels must be raised up from the floor and not be supporting the cabinet.
- Turn the cabinet power switch "ON."

### Camera Topper Installation

- Turn the photo booth OFF, and disconnect the AC main line cord BEFORE installing the camera topper.
- Remove the access panel from the top of the photo booth via the four bolts.
- Mount the access panel to the bottom side of the camera with the three bolts, nuts and washers provided.
- Connect the wire connector inside the camera topper to the matching connector on top of the photo booth, and replace the access panel on top of the photo booth.

### Printer Paper Installation

- Unlock, open, and remove the printer access panel. Keys are zip-tied to the photo booth curtain rod.
- Press the "OPEN" button on the front of the printer door. The printer will unlock the door and allow the door to be rotated down into the horizontal position.
  - Ensure that the photo booth cabinet is connected to the A.C. power outlet.
  - The cabinet must be "Turned On" in order to load paper into the printer.
- Remove all shipping materials from inside the printer.
- Follow the paper and ribbon installation instructions displayed on the decal inside the coin door.
  - The paper support reels are located inside the parts box shipped with the photo booth.
  - The ribbon support tray is located inside the parts box shipped with the photo booth.
- Close the printer door by gently rotating the door up to the vertical position. The printer will then securely lock the door into position.
  - The printer will feed four sheets of paper when the paper and ribbon have been correctly loaded and the door has been properly closed.(See the included **Manufacturer's Printer Manual** for more information and trouble-shooting.)

### Configuration

- Open the coin door, and press the "MENU" button.
- Use the up and down buttons on the Touch Screen LCD monitor to select the appropriate options.
- Set pricing, location, and other options.
- Select "Exit" at the bottom of the Menu to return to normal operation.
- View and download the Fun Stop Photos Manual and other helpful Guides at [www.TeamPlayInc.com](http://www.TeamPlayInc.com).

#### **TEAM PLAY, INC.**

847.952.7533 phone  
847.952.7534 fax  
Service@teamplayinc.com  
www.teamplayinc.com



